

# Table of Contents

1 C	ommonly Used Toolbars, Commands, Etc.	1
1.1	Useful Toolbars	1
1.2	Loading Toolbars	2
1.3	Setting the Behaviour of Dockable Windows and Palettes	3
1.4	Setting the Display of Toolbars	4
1.5	Lock the Position of Toolbars and Dockable Windows	4
1.6	Creating a Workspace	5
1.7	Modifying Toolbars	6

# 1 Commonly Used Toolbars, Commands, Etc.

Toolbars provide one of several customizable ways to start commands and change settings. Buttons with a small black triangle in the lower-right corner are flyout toolbars that contain related commands. With the cursor over the icon, hold down the left button on the mouse until the flyout toolbar displays.

The Quick Access toolbar at the top of the application window is displayed by default. It contains frequently used commands as well as standard commands for opening and saving files.

Standard	□ ▷ ▷ 📕 🖶 Q 🔩 🜻 🛼 🗅 🔥 🖳 🗹 ⇔ ▼ ⇔ ▼ 🗏 🖩 🖻 🕓 🐫 🖩 ⑦ <sup>×</sup>
Carlson Menus	
Properties	ByLayer V ByColor
Survey (Carlson)	
Layers (Carlson)	N S S S S S S S S S S S S S S S S S S S
Layers (AutoCAD®)	

## **1.1 Useful Toolbars**



Page **2** of **9** 

Layers (IntelliCAD <sup>®</sup> )	
Orbit	4 <b>9 9</b>
Workspace	General 🗸 🛱
Object Snap	$\  \multimap \square \land \checkmark \times \times \cdots   \odot \diamondsuit \circlearrowright   \bot \mathscr{N} = \circ   \checkmark \square   \Box  $
Modify	i 🕾 📽 🗊 🗙 😉 🌵 🎄 🕸 🖽 🏥 🖆 🗖 中 🗇 💭 📇 🖆 ⊄ 🎤 💊 🍣 🗗 🕊 🛅 🎽
Draw	⁄ ∕ ⊃ ● ≓ ⁄′ ◎ ≌ ๙ ⇔ ╼ ♣ љ ≻ 璽 璽 回 Ⅲ A ∿

## **1.2 Loading Toolbars**

Toolbars can be shown/hidden by right clicking in a blank section of the toolbar area and selecting the toolbar of interest from the module of interest. The selections can be saved to a Workspace. Personalised Toolbars can also be created. The more toolbars that are selected equals less area for drafting.

General sense set mill rendere i non names (che mont) - deminy hang		- giunninnen H -	·
Settings Survey COGO Centerline Area/Layout Annotate Surface GIS Window Help Points Edit View Insert Express Format Tool	ls		- ć
▋▐▋▐▘Q҈ቘ▋Ø『//⊇௲⋳□/ゔ♡⋈○⋴』ば⊹팵首⋒ℍА▝▖▋₿₽₽₩₩¥₩¥₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩		3D Navigation	1 <sup>46</sup> ) 🖵
🗸 🔮 🏗 🗋 ByLayer 🛛 🚽 🗁 ByLayer 🗸 🚽 🙁 🖌 😅 器 💠 🙄 🗔 🗓 💲 🖃 🗂 🗂 🕂 🧹 🗇 👘 😤 🌺 🌑 🔨	🎬 💁 🔯 🜠 🍠 🏃 🚍 🐂 🤱 🚳 👘	Array Edit	📑 📑 🔍 🚥
* / Ҳ 一 回 ゆ み レ / み 。 ん 第 魚 🔍 🐏 触 🌉 🗶 🎮 🕲 🕼 🗯 🖕 🖄		Array_Toolbar	AutoCAD
		CAD Standards	AutoCAD
		Camera Adjustment Dimension	CARLSON
		Dimensional Constraints	EXPRESS
	~	Draw	Lock Location
		Draw Order	Customize
		Draw Order, Annotation to Front	
		Find Text	
		Geometric Constraint	
		Group Inquiry	
	~	Inguiry	
		Layers	
		Layers II	
		Layouts	
		Lights	
		Mapping	
		Measurement Tools	
		Modeling	
	~	Modify Modify II	
		Multileader	
	~	Object Snap	
		Orbit	
		Parametric	
		PointCloud	
		Properties	
		Refedit	
		Reference	
		Render Smooth Mesh	
		Smooth Mesh Primitives	
		Solid Editing	
	~	Standard	
		Standard Annotation	
		Styles	
		Surface Creation	
		Surface Creation II Surface Editing	
		Text	
		UCS	
		UCS II	
		View	
		Viewports	
		Visual Styles	
	6158.273, 5589.025, 0.000 MODEL ::::	Walk and Fly	🗉 🖬 🕶 ⊵ 🔯
	0130.273, 3303.023, 0.000 MODEL 111	Web Workspaces	2:22 F
🖻 🧆 💩 🚾 🔼			



A toolbar can be *floating* or *docked*. A floating toolbar can be displayed anywhere on the screen, and can drag it to a new location, resized or docked. A docked toolbar can be attached to any edge of the drawing area. Any time a change is made to a Toolbar or it's position then it should be saved in a Workspace.

#### **1.3 Setting the Behaviour of Dockable Windows and Palettes**

Windows such as the ribbon, Properties palette, tool palettes, Command window and DesignCenter can be docked, anchored, or floated. Settings for these and other options are often changed on a shortcut menu, available by right-clicking the title bar of the palette or window.

- **Resize**. Drag an edge of the window to change its size. If the window has panes, drag the bar between panes to resize the panes.
- **Allow Docking**. Select this option if you want to dock or anchor a dockable window. A docked window adheres to one side of the application window, causing the drawing area to be resized.
- Anchor. Attach, or anchor, a dockable window or palette to the left or right side of the drawing area. An anchored window rolls open and closed as the cursor moves across it. When an anchored window is open, its content overlaps the drawing area. An anchored window cannot be set to stay open. The Allow Docking option must be selected before you can anchor a window.
- Auto-hide. A floating window rolls open and closes as the cursor moves across it. When this option is cleared, the window stays open continuously. Undocked windows with auto-hide are displayed as a bar inside the drawing area.
- **Transparency**. Sets the degree of transparency for the window and on mouse over. The window becomes transparent so that it does not obscure objects under it. The window becomes more opaque when the cursor is over it. This option is not available for all windows.

Title bar	Auto-hide		Double bars for dragging	Anchor icon
× × ⊧ ⊧	Line	- 🖬 🎬 🐔		
* *	General	<b>-</b>	Line	
	Color	ByLayer	General	•
	Layer	ByLayer	Color	ByLayer
	Linetype	ByLayer	Layer	ByLayer
	Linetype scale	1.0000	Linetype	ByLayer
	Plot style	ByColor	Linetype scale	1.0000
	Lineweight	ByLayer	Plot style	ByColor
	Transparency	ByLayer	Lineweight	ByLayer
	Hyperlink		Transparency	ByLayer
	Thickness	0.0000	Hyperlink	
	3D Visualization	-	Thickness	0.0000
	Material	ByLayer	3D Visualization	-
	Geometry	▼	Material	ByLayer
	Start X	200.0000	Geometry	<b>-</b>
	Start Y	321.0000	Start X	200.0000
	Start Z	0.0000	Start Y	321.0000
	End X	230.0000	Start Z	0.0000
N N	End Y	321.0000	End X	230.0000
RTTE	End Z	0.0000	End Y	321.0000
PROPERTIES PROPERTIES	Delta X	30.0000	End Z	0.0000
PRC	Delta Y	0.0000	Delta X	30.0000
<ul> <li>PROPERTIES</li> <li>PROPERTIES</li> </ul>	Delta Z	0.0000	Delta Y	0.0000
nchor				

Anchor \_\_\_\_\_ window

Floating Properties palette

Docked Properties palette



# **1.4 Setting the Display of Toolbars**

To display or hide toolbars, right-click any toolbar to display a list of toolbars. A check mark next to a toolbar name indicates that it is displayed. Click a toolbar name to display it or clear the check mark to close it.

Like windows and palettes, a toolbar can be docked or floating. A docked toolbar is attached to an edge of the drawing area. You can


- Undock a toolbar by double-clicking the double bars.
- Move or dock a toolbar by dragging it to a new location.
- Resize a floating toolbar by dragging an edge.

#### **1.5 Lock the Position of Toolbars and Dockable Windows**

Once you have arranged toolbars and docked, floating, or anchored windows the way you want them, you can lock their position. Locked toolbars and windows can still be used, opened or closed.

To lock toolbars in Carlson with AutoCad or Carlson OEM go to the bottom right of the screen and click the


3 horizonal bars which will display the **Customization** menu then select **Lock UI**, an icon will appear along the bottom from which **Floating Toolbars/Panels**, **Docked Toolbars/Panels**, **Floating Windows** and **Docked Windows** can be locked or unlocked. Once toolbars have been locked the grip point for moving toolbars disappears.

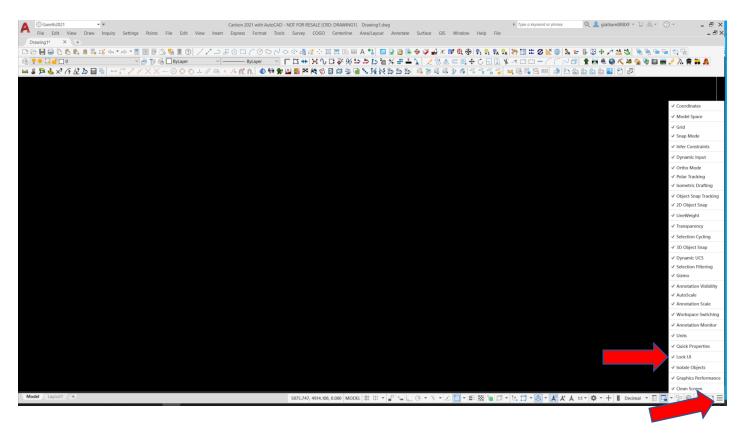

To unlock them temporarily, press and hold Ctrl.



For Carlson with IntelliCad the Lock Toolbar is found by right clicking the mouse while the cursor is in a blank area beside a toolbar then scrolling down to **Lock Location** selection which toolbars to lock.

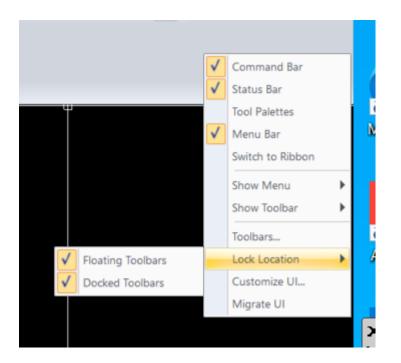

It is recommended that once all toolbars are customized that a **Workspace** is created to save these settings.


#### **1.6 Creating a Workspace**

Workspaces are sets of menus, toolbars, palettes, and ribbon control panels that are grouped and organized so that you can work in a custom, task-oriented drawing environment.

When you use a workspace, only the menus, toolbars, and palettes that are relevant to a task are displayed. In addition, a workspace may automatically display the ribbon, a special palette with task-specific control panels.

You can easily switch between workspaces.


To create a workspace in Carlson with AutoCad or Carlson OEM make sure workspace is selected via the drop-down arrow at the top left of the screen, once workspace is on then **Save Current As** and save with a new name. Any time that the tool bars are changed this workspace name should be updated.

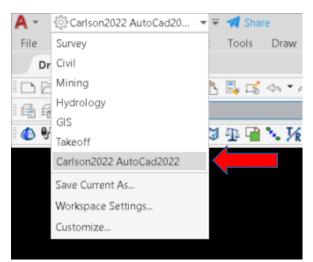



# **1.7 Modifying Toolbars**

Toolbars can be modified by right clicking on the toolbar then scrolling down to customize, alternatively you can type 'cui' into the command line, unfortunately you then have to find the toolbar you wanted to modify, the first method takes you straight to the toolbar (as shown on next page).

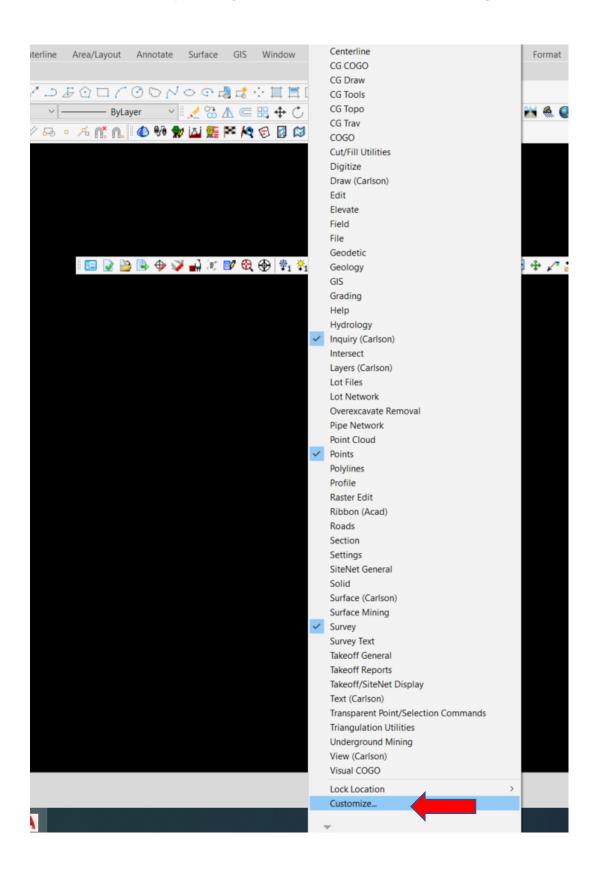



Page **7** of **9** 

You will need to expand the screen by selecting the down arrows across from 'Customizations in All Files' and the > right of the 'Help' at the bottom.

A	Customize User Interface				$\times$
Cu	stomizations in All Files				
1	o add a command, drag a command he Quick Access toolbar, a toolbar, o	from the Comma r tool palette.	nd List pan	e to	
Co	mmand List:				~
Sec	urch command list				
					2
All (	Commands Only			~ 2à	22
	Command	Source			~
	x	CARLSON			
	XY	CARLSON			
	XZ	CARLSON			
	.Y	CARLSON			
	.YZ	CARLSON			
	Z	CARLSON			
AZI	_Azimuth	CARLSON			
A-D	_AzimuthDistance	CARLSON			
BRG	_Bearing	CARLSON			
B-D	_BearingDistance	CARLSON			
DIST	_Distance	CARLSON			
	_Gon	CARLSON			
	12D File	CARLSON			
	12D File	CARLSON			
2x2	2 Point-2 Point Intersect	CARLSON			
	2 Tangents,Arc Length	CARLSON			
	2 Tangents, Chord Length	CARLSON			
	2 Tangents, Degree of Curve	CARLSON			
	2 Tangents,External	CARLSON			
	2 Tangents,Mid-Ordinate	CARLSON			
	2 Tangents,Radius	CARLSON			
	2 Tangents, Tangent Length	CARLSON			
	2 Tangents, Through Point	CARLSON			
	2D Align	CARLSON			
1	2D Line	CARLSON			
-	2D Linework Library	CARLSON			
l P	2D Point	CARLSON			
N	2D Polyline	CARLSON			~
	OK Cancel	Apply	Hel	р	
					- 5



As Carlson 'Points' toolbar was selected the CUI (Customize User Interface) has opened up at that toolbar.

- 💷 🖉 連 🗣 🏈 🖬 ボ 💕 🏵 🏵   戦 🍕 戦 🖏 🍉 🎬 井 🏈 🗹 🖶 🐧 🖘 🖡 🖉 中 🖍 🚣 🍕	A Customize User Interface				— 🗆 X
	Customize Transfer				
	Customizations in All Files		•		
	All Customization Files		× 🖙 🖬 🐂	Toolbar Preview	*
			× 47 🖬 🖷		
	B E Settings		^	Points	x
	B Inquiry (	Carlson)		🖂 📑 🔛 🔁 🖼 🖬 🗐	🖬 🔁 🚱 🔛 🔛 🔛 🖤 📰 🔛 💌 🖼 💟
	Points				
	- 🚖 Poir				
		CooRDinate File			
		ort Text/ASCII File ort Text/ASCII File		Properties	8
		w-Locate Points			^
		rdinate File Utilities		21 📰	
		nt Group Manager		✓ General	
	一 ☆ List			Name	Points
	- ģ Edit			Description     Appearance	
		m Point(s) nt Object Snap On/Off		Default Display	Do not add to workspaces
		it object shap on on		Orientation	Тор
		eze Points		Default X Location Default Y Location	1
	一 ☆ Tha			Rows	1
		eze Point Attributes		~ Advanced	
	L i i i i i i i i i i i i i i i i i i i	w Point Attributes		Aliases Element ID	SC_POINTS, Points ID_POINTS
	Command List:		\$	Element ID	ID_POINTS
	Search command list		Q		
	Search command list				
	All Commands Only		✓ ½ ½		
	Command	Source	^		
	x	CARLSON			
	YX.	CARLSON			
	XZ	CARLSON			
	.Y .YZ	CARLSON			
	.YZ Z	CARLSON			
	Azimuth	CARLSON			
	A-D AzimuthDistance	CARLSON			
	BRG _Bearing	CARLSON			
	8-D _BearingDistance	CARLSON			
	DIST _Distance	CARLSON			
	_Gon	CARLSON		General	
	12D File	CARLSON			
	12D File 2x2 2 Point-2 Point Intersect	CARLSON CARLSON			
	Exe 2 Point 2 Point Intersect	CARLSON			
				ОК	Cancel Apply Help

If 'List Points' was then selected then all the properties of that command are shown on the right of the screen.

A Customize User Interface				— 🗆 ×
Customize Transfer				
Customizations in All Files		\$	Toolbar Preview	2
All Customization Files		<ul> <li>Image: Image: Ima</li></ul>		
B-E Settings B-E Layers (Carls B-E Inquiry (Carls D-D Points D-S Point Del →☆ Set Coof	on) aults RDinate File	^	Points	2 🔂 🔂 🔛 🔛 🔝 💓 📰 🖼 💌 🗱 💟
☆ Import Te			Button Image	
- ☆ Point Gro - ☆ Edit Point - ☆ Edit Point - ☆ Zoom Pc - ☆ Point Obj - ☆ - - ☆ Freeze P - ☆ Freeze P - ☆ Freeze P	te File Utilities up Manager s s s ints ect Snap On/Off oints nits init Attributes		Apply to: Small image Large image Edit Export Properties	Image: Add (integration of the integration of the integra
	int Attributes	· · · · · · · · · · · · · · · · · · ·	21 21 m	
Command List:		\$	V Display Name	List Points
Search command list			<ul> <li>Command</li> </ul>	List Points
			Command Name	List Points
All Commands Only		~ ½ 😤	Description	Lists points numbers, northings, eastings, elevations
Command	Source	^	Extended Help File	
List Points	CARLSON		Command Display Name Macro	^C^Clistpt;
List Points	CARLSON		Tags	o onathr
	EXPRESS		✓ Advanced	
List Viewport Scale	200 11200		Element ID	ID_listpt
List Xref/Block Properties	EXPRESS		✓ Images	
Live Section	ACAD		Small image	listpts.png
Live Section	ACAD21TB		Large image	listpts2.png
Live Section	CARLSON			
Load Application	ACAD21TB			
Load Application	ACAD			
Load Application	CARLSON			
	CARLSON			
Load Image Set	CARLSON		Display	
Load Image Set Load Last Report Formatter	GARLOUN		Dispidy	
	CARLSON			
Load Last Report Formatter				

© 2022 | Carlson Software | APAC Support | <u>support@carlsonsw.com</u> | <u>www.carlsonsw.com</u>



Right clicking on 'List Points' allows that command to be modified in the toolbar, if you **Remove** it, it can be replaced from the list in 'All commands Only', just drag and drop.

Customize Transfer		
Customizations in All Files		*
All Customization Files		~ 🖙 🖶 🐻
Bettings     Layers (Carl     Cordin     Cordi	son)  faults RDinate File ext/ASCII File ext/ASCII File cate Points ate File Utilities oup Manager  Insert Separator New Toolbar New Flyout Rename Remove	
- 🕸 Thaw	Duplicate Copy	~
Command List:	Paste	*
Search command list	Find	Q
All Commands Only	Replace	~ \$a \$
Command List Points List Raw File List XreWork Scale List XreWork Croperties Live Section Live Section Live Section Live Section Load Application	Source CARLSON CARLSON EXPRESS EXPRESS ACAD ACAD21TB CARLSON ACAD21TB	^
Load Application     Load Application     Load Image Set     Load Last Report Formatter     Load Markup Set     Load Markup Set	ACAD CARLSON CARLSON CARLSON CARLSON ACAD21TB ACAD	Ū

If there is limited screen space then the ' $\approx$  - ' (separator line in toolbar display) from the toolbar list can be removed, if 3 of these are removed then another command can take their place. Commands that are not likely to be used can also be removed to free up space.

The 'All Commands Only' has all the commands available but this doesn't stop new commands from being created and adding to a toolbar or from a new toolbar being created.