Carlson Software Inc. 102 West 2nd Street Maysville, KY 41056


www.carlsonsw.com

Phone: (606) 564-5028 Fax: (606) 564-6422


This is in regards to using SurvCE Version 3.03 or higher with a "2 point Rotate Only" method scaled to Ground

Localizing using 2 Point Rotate Only then scaling to Ground

- 1) Run Equip / GPS Rover and get a "Fixed" solution with your GPS Rover
- 2) Go into Equip / Localization and set your System tab to the correct USA Nad83 projection
- 3) Tap the Points tab
- 4) Occupy a known point with your GPS Rover and tap the "Add" button then type in the point number from your CRD coordinate file you are occupying for select it from the List or
- 5) Tap the Green Check then tap the Green Check again to use the "Read GPS" option
- 6) Plumb up over the point and tap the Green Check again in the upper right to take 10 or 20 readings
- 7) Tap Green Check to accept the results

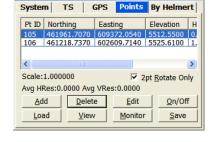

- 8) Now walk to your 2nd known point that you have coordinates for and repeat Steps 4 through 7 to add in this second point
- 9) After adding in both points to the Points tab tap next to the "2pt Rotate Only" checkbox to CHECK the box
- 10) Now tap the 2nd point in the list to highlight it and tap the "On/Off" button in the bottom right and UNCHECK the box next to Vertical control then tap the Green Check to save your changes

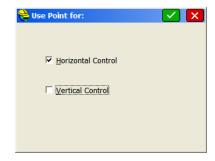

- 11) Tap the **GPS Tab** then tap the Green Check to save your Localization File.
- 12) Check the box for "Use Grid to Ground" then tap the icon in the bottom right to "Read GPS" and calculate your combined Grid to Ground Scale factor



- 13) Tap the Green Check to accept the GPS Grid to Ground Information
- 14) Then tap the Green Check again in the top right to Apply these changes to your Job and return to the Equip tab in the Main Menu.