


If you have found that CRD files which are used in the desktop software, are appearing blank when imported to SurvCE, you may have to alter the CRD file format.


Though both Carlson and C&G use CRD files, the files are in a different format. C&G CRD files require an IDX file, while Carlson's CRD does not.

To Check the Format of Your CRD File:


- 1 Go to the Points drop-down and select Coordinate File Utilities.

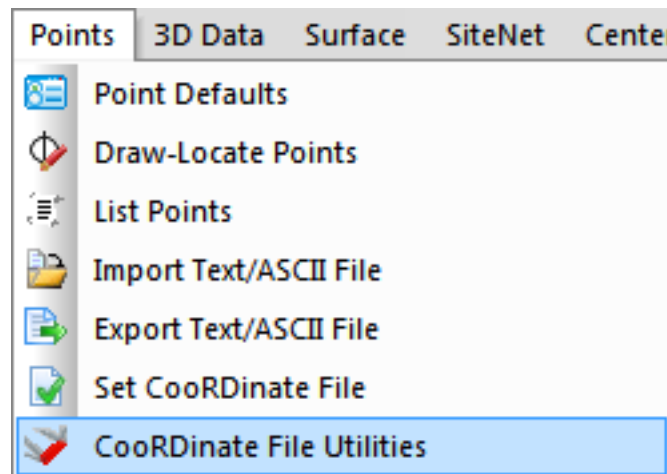


- 2 The CRD file format will be displayed at the top of the Coordinate File Utilities dialogue box. If it is not showing Carlson as the format, click on Convert CRD File Format.

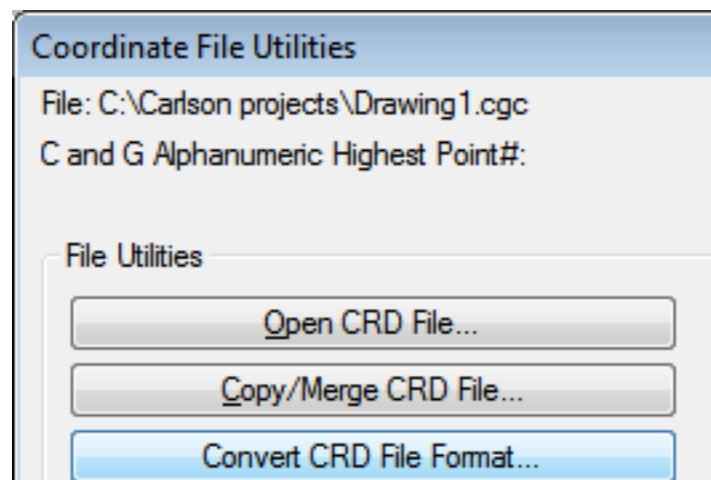

- 3 Choose Carlson Alphanumeric as your new CRD file format. Then, click OK.

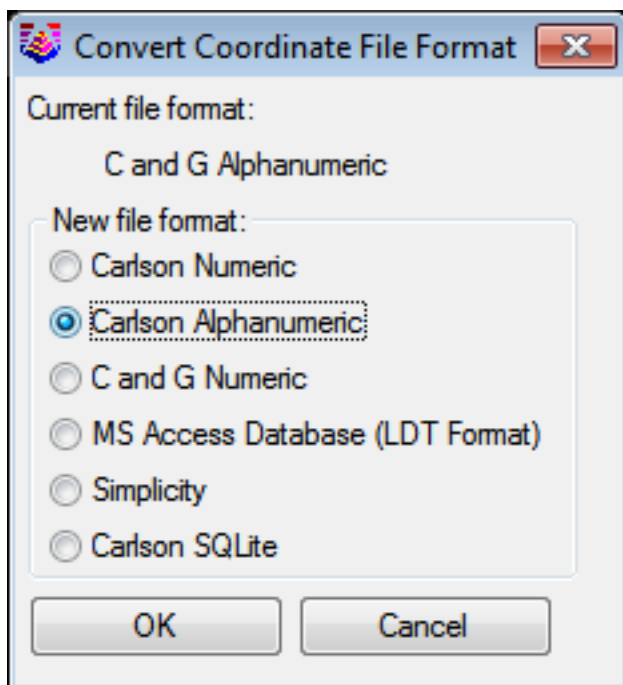

- 4 The Coordinate Files Utilities box will be updated to show the change in CRD format.

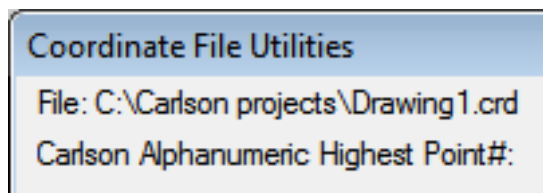

- 5 You may now transfer your CRD to your data collector, which is running SurvCE.